

EF 102R/16 K Cat. 2024 Garden tractor



Документы

Mulching Kit

Grassbag

Mowing deck

Engine

Tank

Transmission

Frame

Front axle

Steering arm

Rear axle

Seat

Cutting plate lifting

Electrical parts

body

Towing hitch

Labels

Top cover

Ignition system

Flywheel

Starter lever

Control lever

Carburetor

 
Air filter

Valves

Crankshaft and piston


Crankcase cover

Cylinder and crankcase

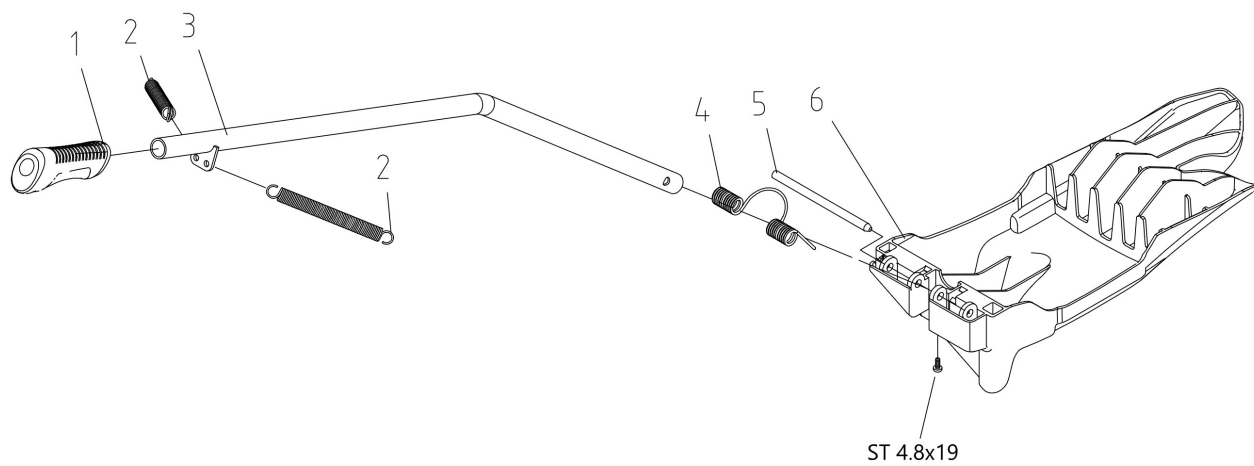


изображение Mulching Kit

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000047R	Knob				
2	2	TS000048R	Spring				
3	1	TS000049R	Handle				
4	1	TS000050R	Spring				
5	1	TS000051R	Pin				
6	1	TS000003R	Deflector				

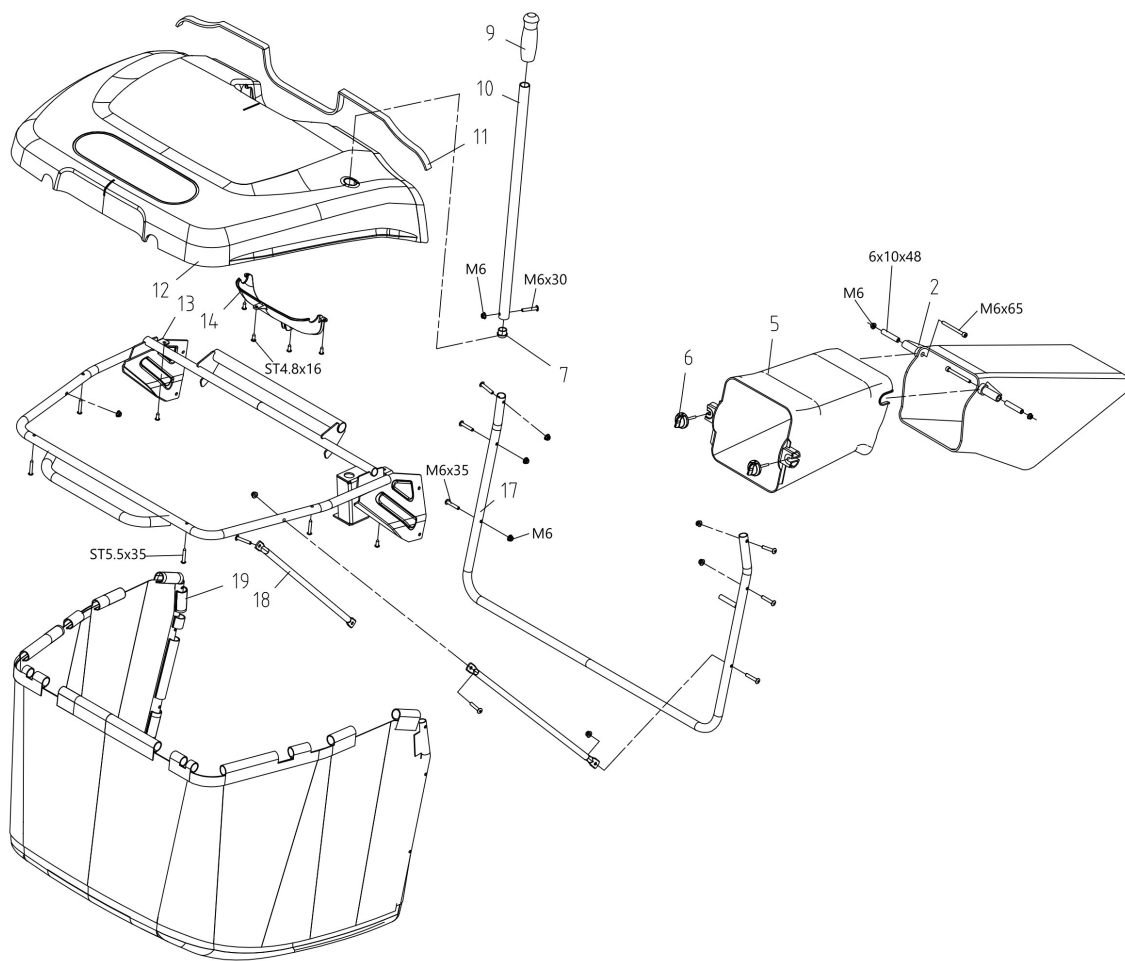 


изображение Grassbag

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	1	TS000052R	Exhaust				
5	1	TS000053R	Exhaust pipe				
6	2	TS000054R	Screw				
7	1	TS000055R	Cap				
9	1	TS000056R	Knob				
10	1	TS000057R	Lever				
11	1	TS000058R	Gasket				
12	1	TS000004R	Grass-bag cover				
13	1	TS000059R	Frame				
14	1	TS000060R	Cover				
17	1	TS000061R	Frame				
18	2	TS000062R	Bracket				
19	1	TS000381R	Grass collector			Efco	

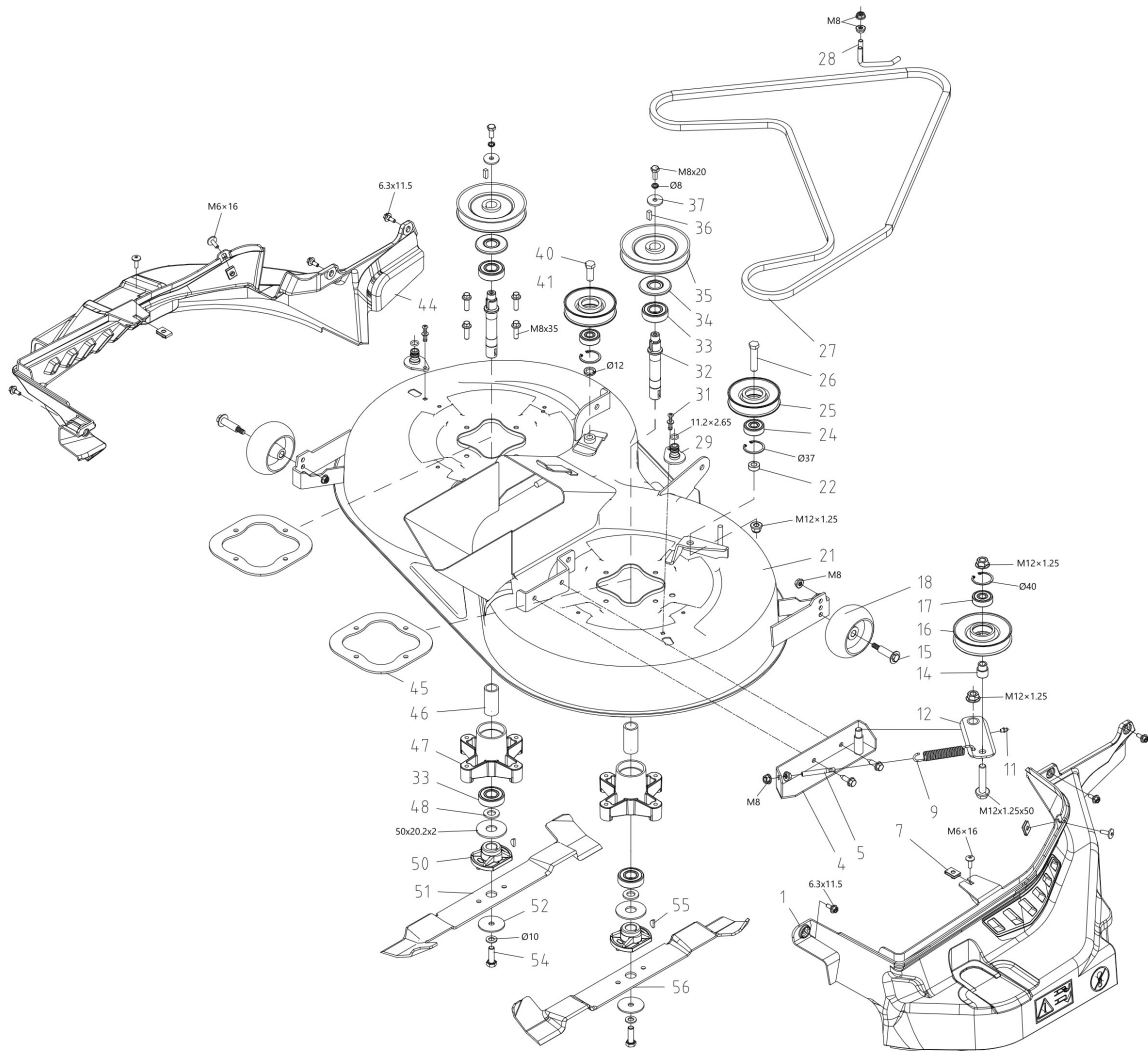 


изображение Mowing deck

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000108R	Belt cover				
4	1	TS000064R	Bracket				
5	1	TS000065R	Screw				
7	4	TS000066R	Clamp				
9	1	TS000067R	Spring				
11	1	TS000068R	Nipple				
12	1	TS000069R	Lever				
14	1	TS000070R	Bushing				
15	2	TS000071R	Screw				
16	1	TS000072R	Pulley				
17	1	TS000073R	Thrust bearing				
18	2	TS000074R	Wheel				
21	1	TS000109R	Mowing deck				
22	1	TS000076R	Bushing				
24	2	TS000005R	Thrust bearing				
25	2	TS000006R	Pulley				
26	1	TS000077R	Screw				
27	1	TS000110R	Belt				
28	1	TS000079R	Bracket				
29	2	TS000104R	Water hose connection				
31	2	TS000089R	Rivet				
32	1	TS000080R	Blade shaft				
33	4	TS000086R	Thrust bearing				
34	2	TS000085R	Disc (guard)				
35	2	TS000111R	Pulley				
36	2	TS000082R	Key				
37	2	TS000083R	Washer				
40	1	TS000081R	Screw				
41	1	TS000087R	Blade shaft				
44	1	TS000112R	Belt cover				
45	2	TS000091R	Plate				
46	2	TS000092R	Tube				
47	2	TS000093R	Support				
48	2	TS000094R	Spacer				
50	2	TS000095R	Blade hub				
51	1	TS000113R	Blade				
52	2	TS000097R	Washer				
54	1	TS000098R	Screw				
55	2	TS000099R	Key				
56	1	TS000114R	Blade				

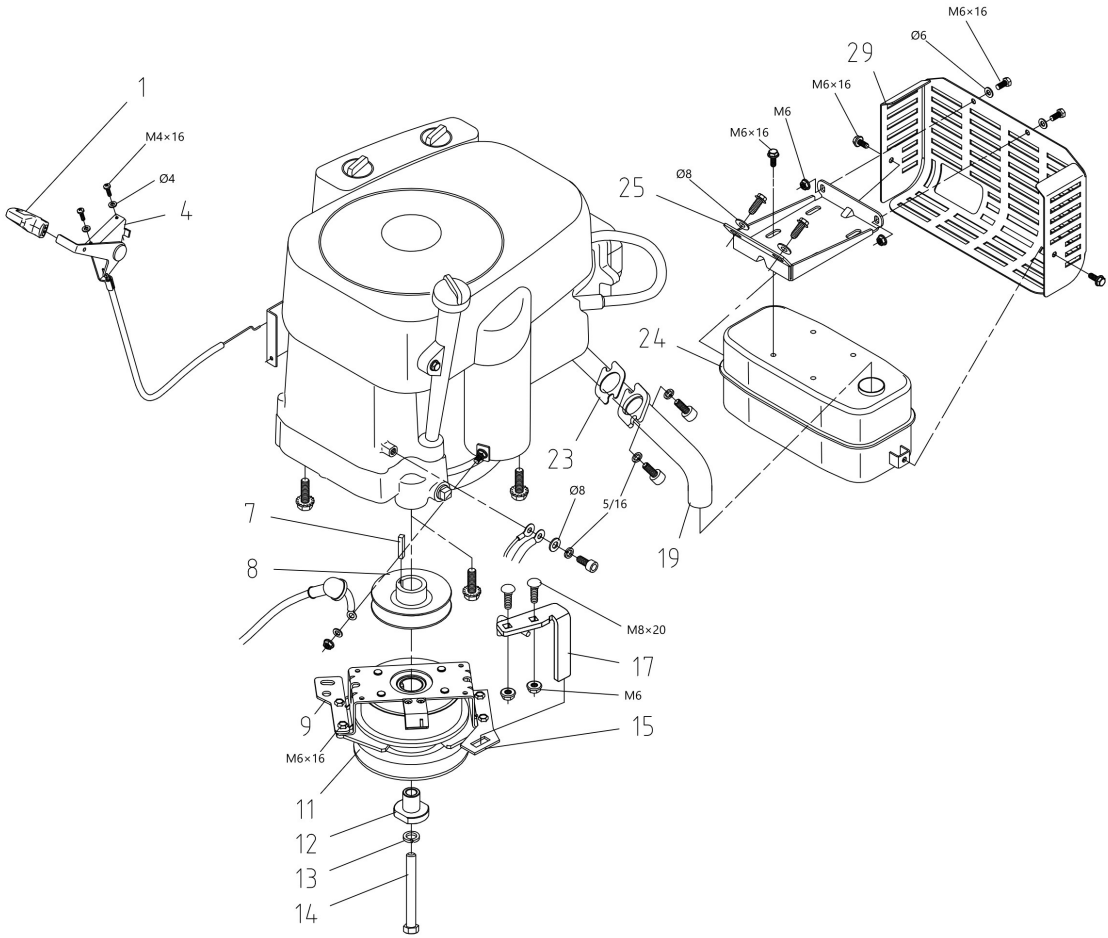 


изображение Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000147R	Knob				
4	1	TS000008R	Throttle cable				
7	1	TS000009R	Key				
8	1	TS000148R	Pulley			Motore 12,5 KM - Engine	
8	1	TS000159R	Pulley			Motore 14,5 K / 16 K - Engine 14,5 K / 16 K	
9	1	TS000010R	Support				
11	1	TS000149R	Clutch				
12	1	TS000150R	Bushing				
13	1	TS000151R	Thickness				
14	1	TS000152R	Bolt				
15	1	TS000153R	Plate				
17	1	TS000154R	Bracket			Motore 12,5 KM - Engine	
17	1	TS000160R	Bracket			Motore 14,5 K / 16 K - Engine 14,5 K / 16 K	
19	1	TS000155R	Exhaust pipe				
23	1	TS000156R	Gasket				
24	1	TS000157R	Muffler				
25	1	TS000158R	Support				
29	1	TS000011R	Grid				

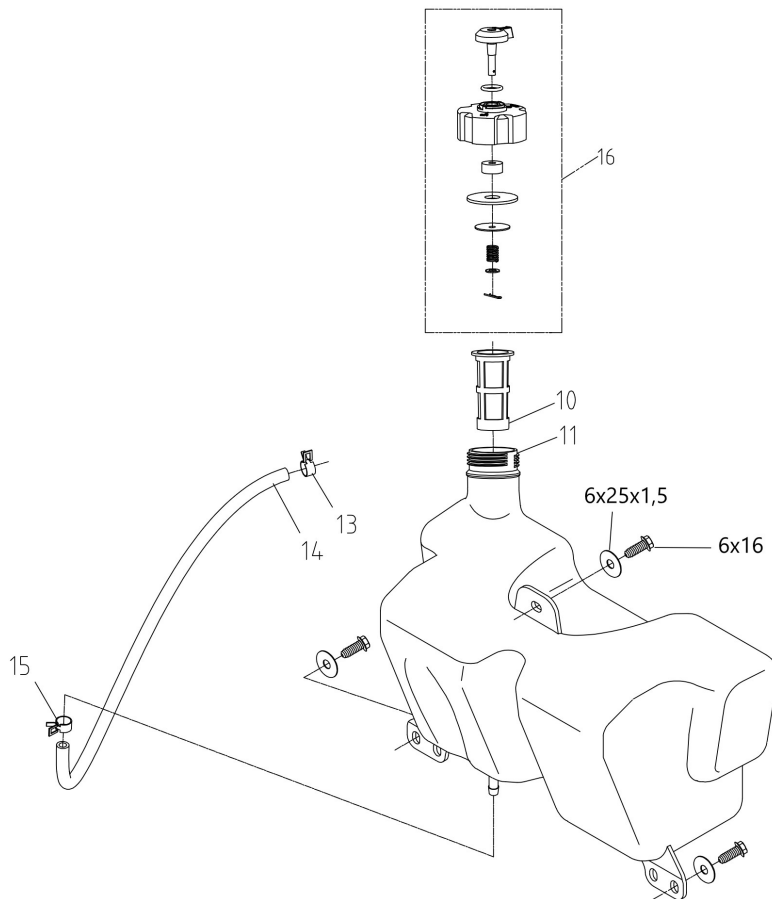 


изображение Tank

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
10	1	TS000012R	Filter				
11	1	TS000161R	Tank				
13	1	TS000162R	Band				
14	1	TS000163R	Fuel hose				
15	1	TS000164R	Band				
16	1	TS000013R	Tank cap				

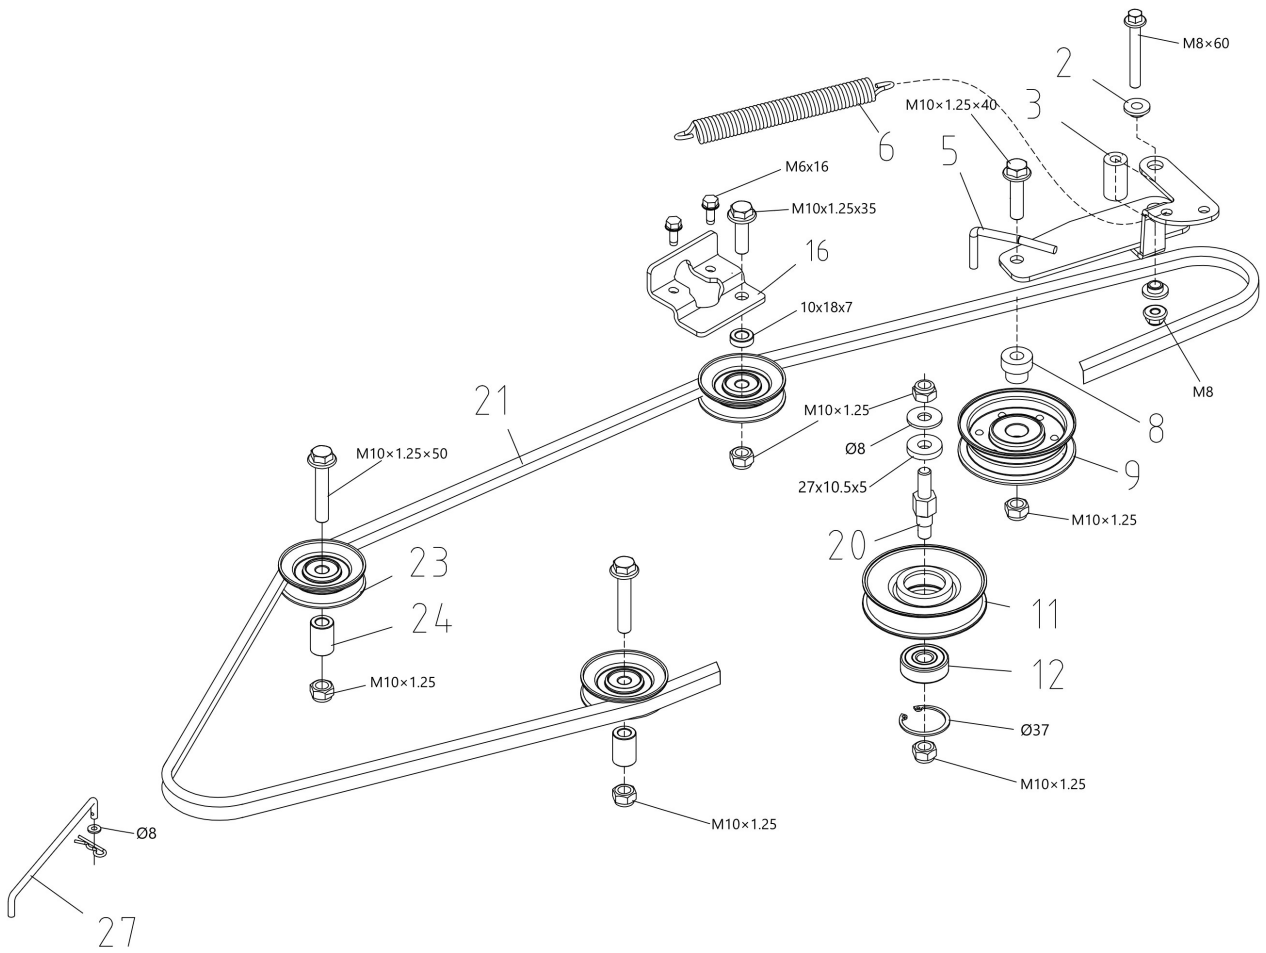 


изображение Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	2	TS000173R	Bushing				
3	1	TS000253R	Spacer				
5	1	TS000255R	Support				
6	1	TS000130R	Spring				
8	1	TS000122R	Bushing				
9	1	TS000007R	Pulley				
11	1	TS000006R	Pulley				
12	1	TS000005R	Thrust bearing				
16	1	TS000263R	Plate				
20	1	TS000259R	Screw				
21	1	TS000025R	Belt				
23	3	TS000023R	Pulley				
24	2	TS000260R	Bushing				
27	1	TS000264R	Guide pulley				

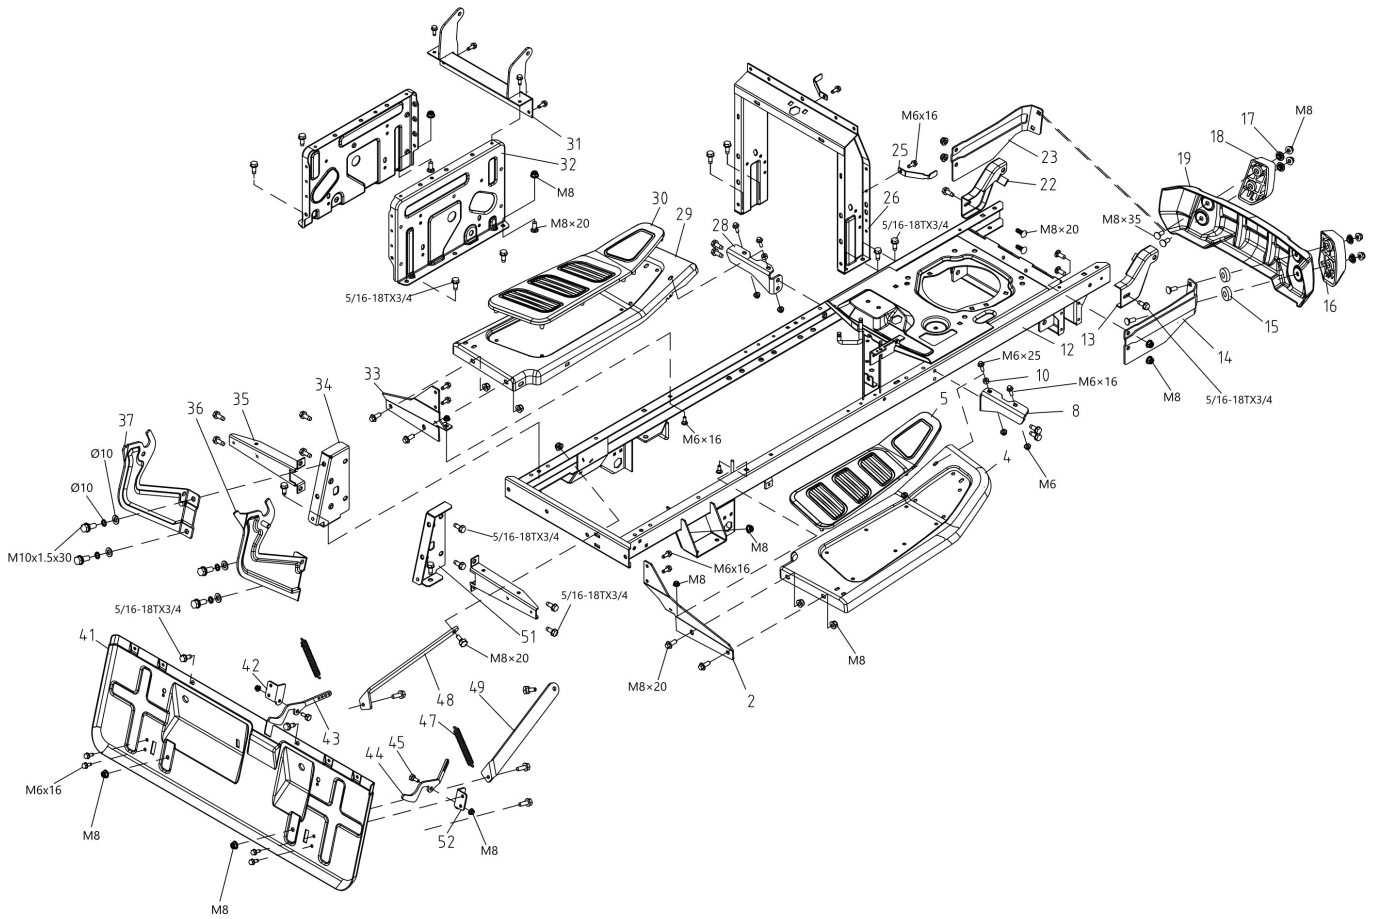 


изображение Frame

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	1	TS000165R	Right footboard support				
4	1	TS000166R	Footrest pad			Destra; Right	
5	1	TS000167R	Right footboard cover				
8	1	TS000168R	Right footboard support				
10	2	TS000169R	Bushing				
12	1	TS000170R	Frame				
13	1	TS000171R	Hood support			Destra; Right	
14	1	TS000172R	Support			Destra; Right	
15	4	TS000014R	Washer				
16	1	TS000015R	Bumper				
17	4	TS000173R	Bushing				
18	1	TS000016R	Bumper				
19	1	TS000017R	Lower hood				
22	1	TS000174R	Hood support			Sinistra; Left	
23	1	TS000175R	Support			Sinistra; Left	
25	2	TS000176R	Plate				
26	1	TS000177R	Column support				
28	1	TS000178R	Left footboard support				
29	1	TS000179R	Footrest pad			Sinistra; Left	
30	1	TS000180R	Left footboard cover				
31	1	TS000181R	Frame				
32	2	TS000182R	Support				
33	1	TS000183R	Left footboard support				
34	1	TS000184R	Support			Sinistra; Left	
35	2	TS000185R	Support				
36	1	TS000186R	Support			Destra; Right	
37	1	TS000187R	Support			Sinistra; Left	
41	1	TS000188R	Support				
42	1	TS000189R	Bracket				
43	1	TS000190R	Hook			Sinistra; Left	
44	1	TS000191R	Hook			Destra; Right	
45	2	TS000192R	Screw				
47	2	TS000193R	Spring				
48	1	TS000194R	Left bracket				
49	1	TS000195R	Right bracket				
51	1	TS000196R	Support			Destra; Right	
52	1	TS000197R	Bracket				

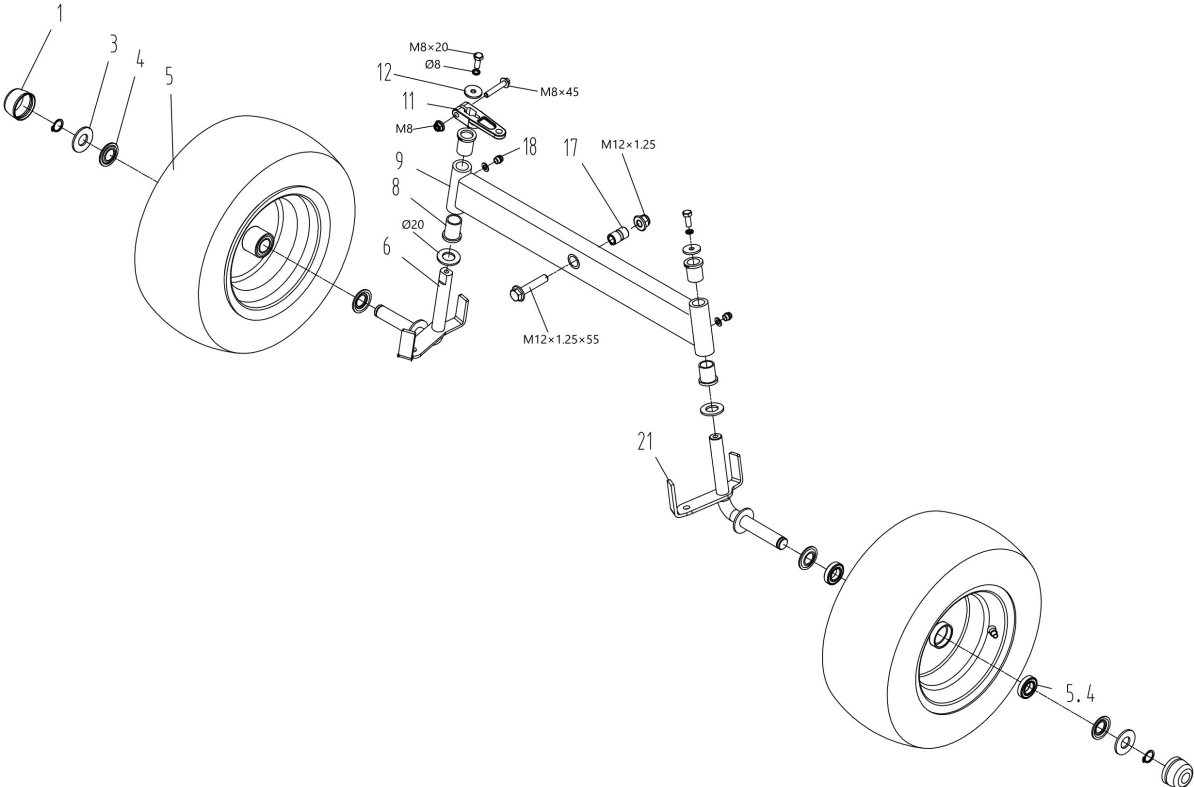 


изображение Front axle

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	TS000198R	Hub cap				
3	2	TS000199R	Washer				
4	4	TS000200R	Spacer				
5	2	TS000018R	Compl. front wheel				
5,4	4	TS000204R	Thrust bearing				
6	1	TS000019R	Pin			Destro; Right	
8	4	TS000020R	Bushing				
9	1	TS000205R	Front axle				
11	1	TS000021R	Lever				
12	2	TS000083R	Washer				
17	1	TS000206R	Spacer				
18	2	TS000068R	Nipple				
21	1	TS000022R	Pin			Sinistro; Left	

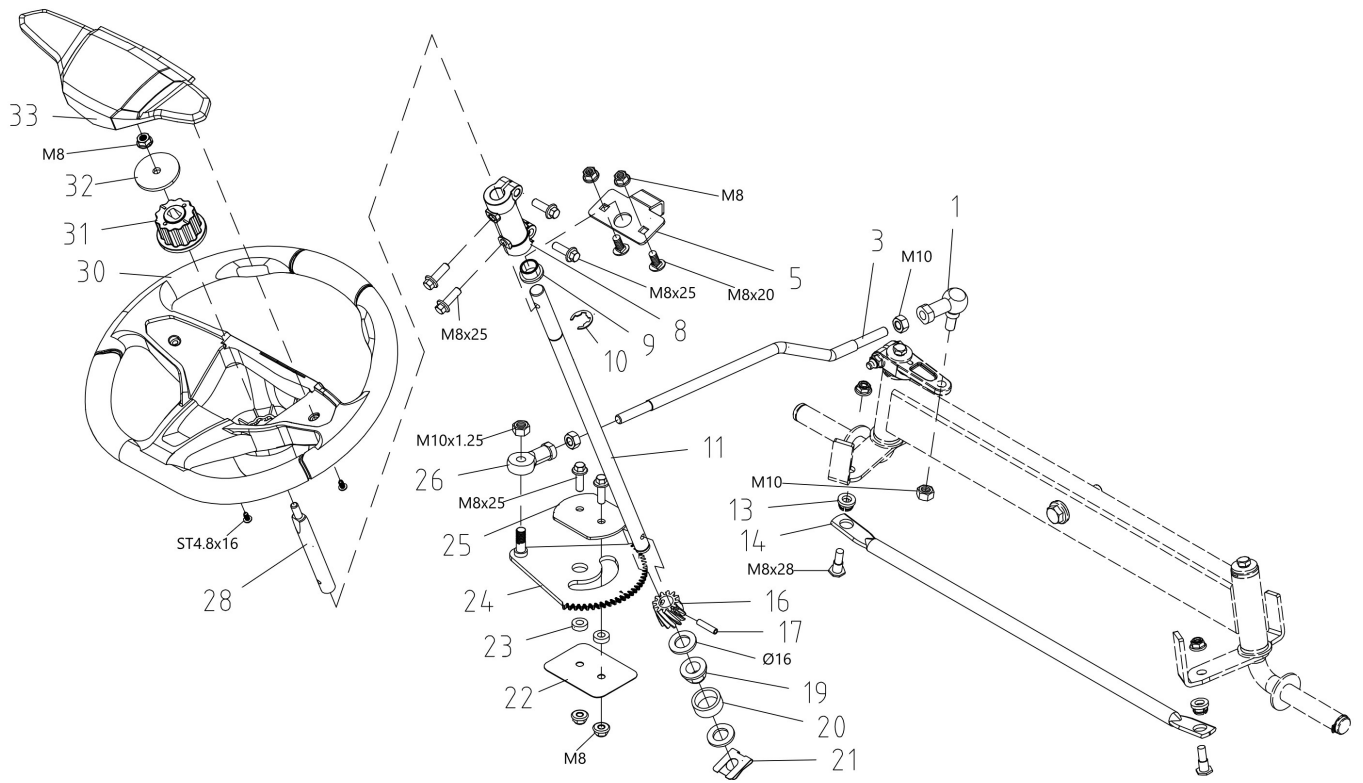 


изображение Steering arm

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000267R	Joint				
3	1	TS000268R	Tie rod				
5	1	TS000269R	Plate				
8	1	TS000270R	Sleeve				
9	1	TS000271R	Bushing				
10	1	TS000272R	Snap ring				
11	1	TS000273R	Steering arm				
13	2	TS000274R	Bushing				
14	1	TS000275R	Tie rod				
16	1	TS000026R	Sprocket				
17	1	TS000276R	Pin				
19	1	TS000378R	Bushing				
20	1	TS000277R	Bushing				
21	1	TS000278R	Cotter pin				
22	1	TS000279R	Fixing plate				
23	2	TS000280R	Bushing				
24	1	TS000027R	Sector				
25	1	TS000281R	Fixing plate				
26	1	TS000282R	Joint				
28	1	TS000283R	Spacer				
30	1	TS000284R	Steering wheel				
31	1	TS000028R	Support				
32	1	TS000379R	Washer				
33	1	TS000375R	Cover			Rosso - Red	

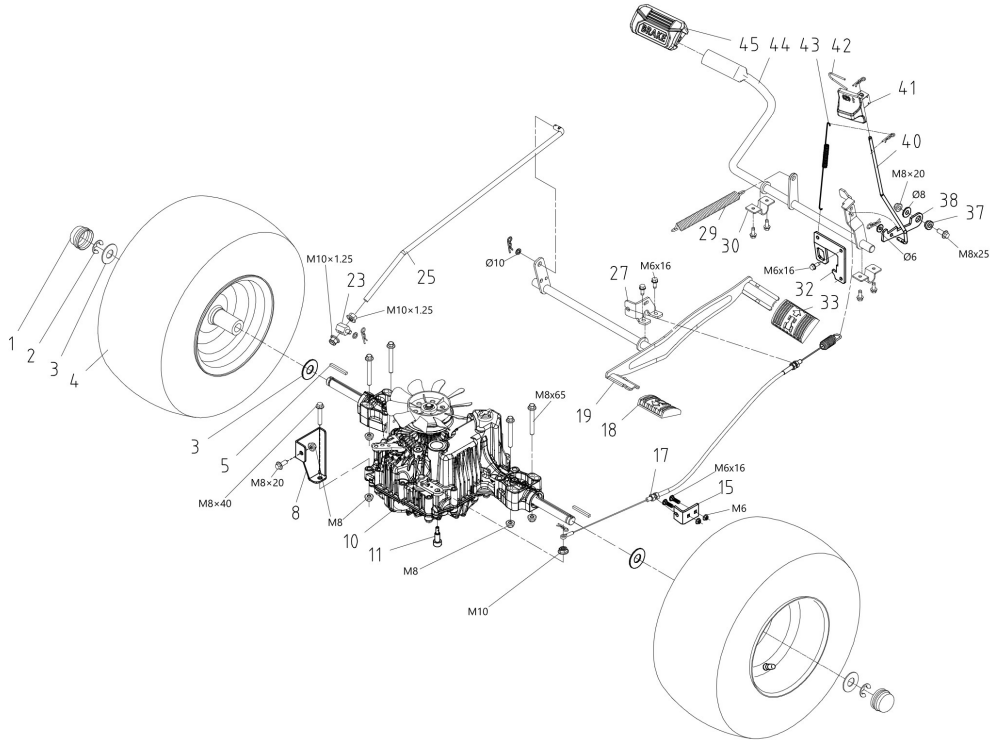 


изображение Rear axle

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	TS000198R	Hub cap				
2	2	TS000207R	Snap ring				
3	4	TS000199R	Washer				
4	2	TS000212R	Compl. rear wheel				
5	2	TS000210R	Key				
8	1	TS000240R	Plate				
10	1	TS000241R	Transmission				
11	1	TS000242R	Pin				
15	1	TS000243R	Support				
17	1	TS000244R	Break cable				
18	1	TS000245R	Clamp cover rear				
19	1	TS000246R	Pedal				
23	1	TS000247R	Pin				
25	1	TS000248R	Tie rod				
27	1	TS000249R	Fixing plate				
29	1	TS000250R	Spring				
30	2	TS000231R	Support				
32	1	TS000230R	Support				
33	1	TS000251R	Clamp cover front				
37	1	TS000232R	Bushing				
38	1	TS000233R	Compl.brake lever				
40	1	TS000234R	Control rod				
41	1	TS000235R	Handle				
42	1	TS000236R	Fork				
43	1	TS000237R	Spring				
44	1	TS000238R	Brake pedal				
45	1	TS000239R	Cover moulding				

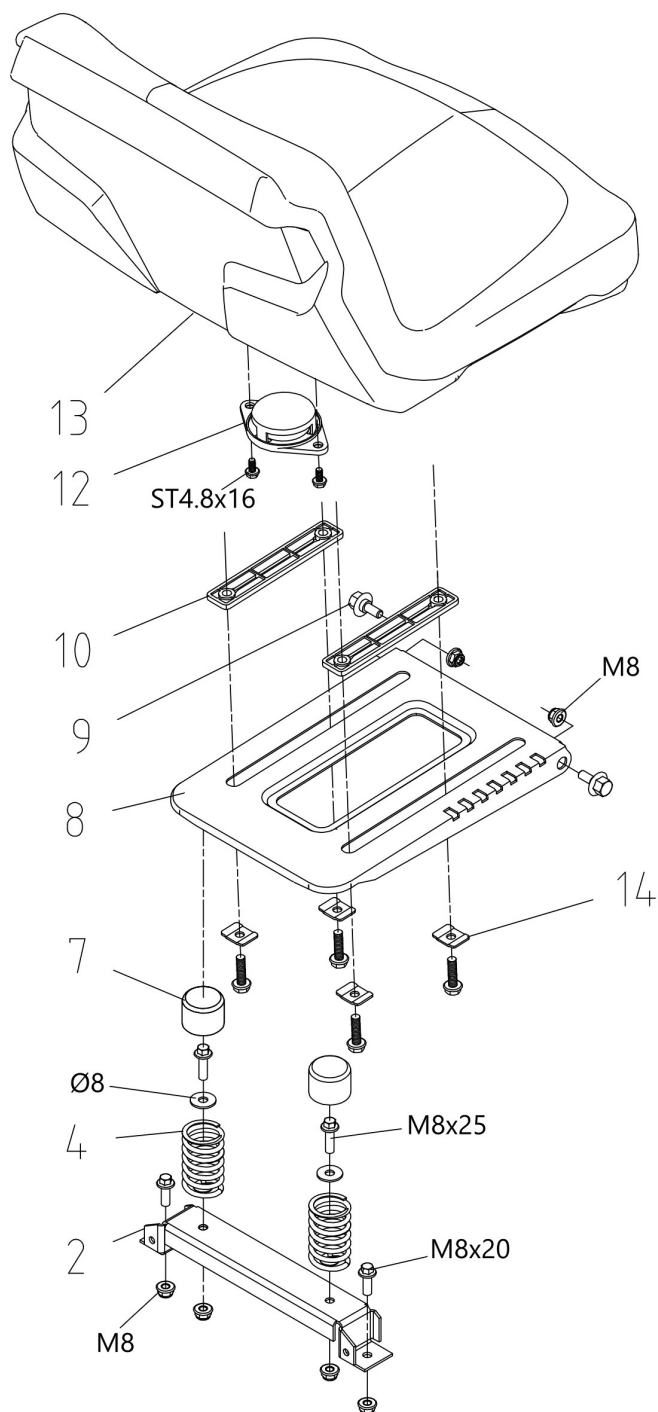 


изображение Seat

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	1	TS000285R	Bar				
4	2	TS000286R	Spring				
7	2	TS000287R	Cover				
8	1	TS000288R	Seat support				
9	2	TS000289R	Screw				
10	2	TS000290R	Slide				
12	1	TS000029R	Seat switch				
13	1	TS000372R	Seat			Rosso - Red	
14	4	TS000291R	Spacer				

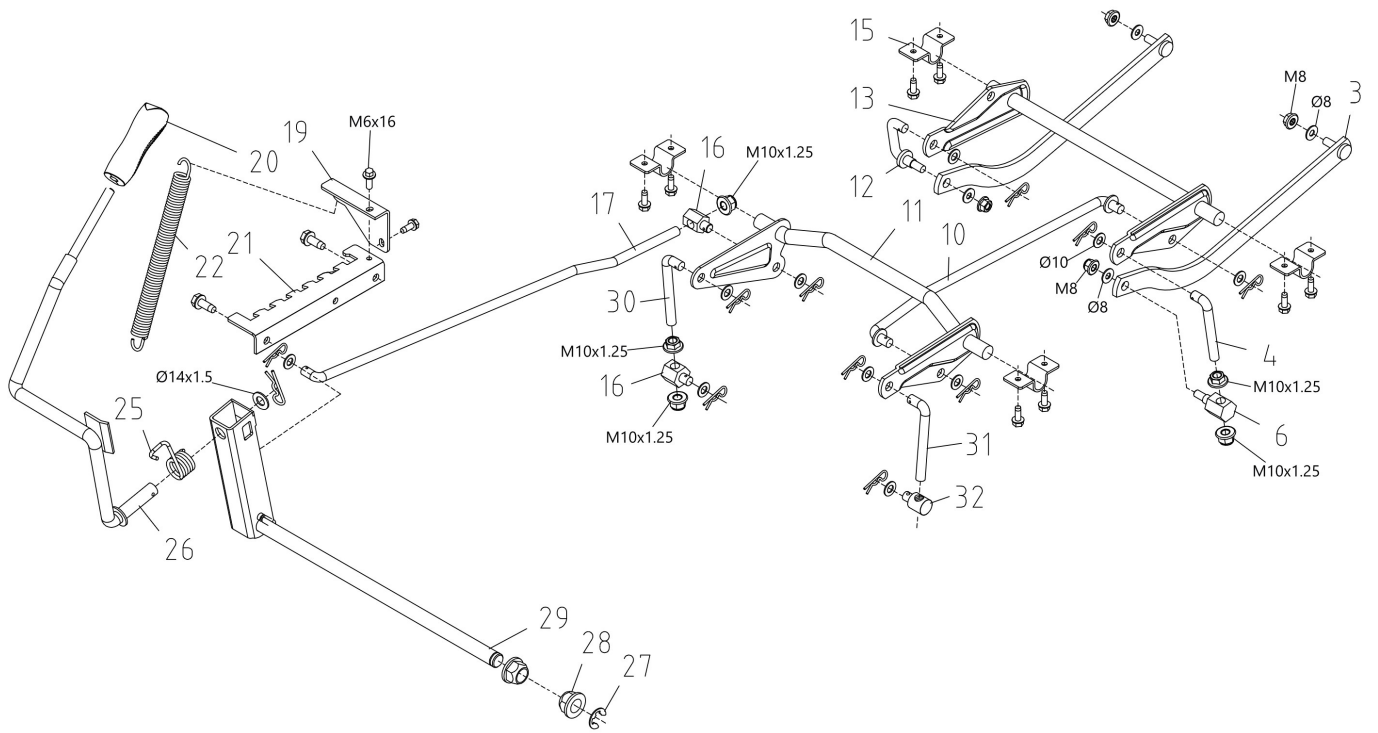 


изображение Cutting plate lifting

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
3	2	TS000292R	Rod				
4	1	TS000293R	Tie rod				
6	1	TS000294R	Joint				
10	1	TS000295R	Rod				
11	1	TS000296R	Axel lift				
12	1	TS000297R	Rod				
13	1	TS000298R	Support				
15	4	TS000231R	Support				
16	2	TS000299R	Joint				
17	1	TS000300R	Rod				
19	1	TS000301R	Plate				
20	1	TS000226R	Knob				
21	1	TS000030R	Support				
22	1	TS000302R	Spring				
25	1	TS000303R	Spring				
26	1	TS000031R	Lever				
27	1	TS000223R	Snap ring				
28	2	TS000378R	Bushing				
29	1	TS000304R	Lever				
30	1	TS000305R	Tie rod				
31	1	TS000306R	Tie rod				
32	1	TS000307R	Joint				

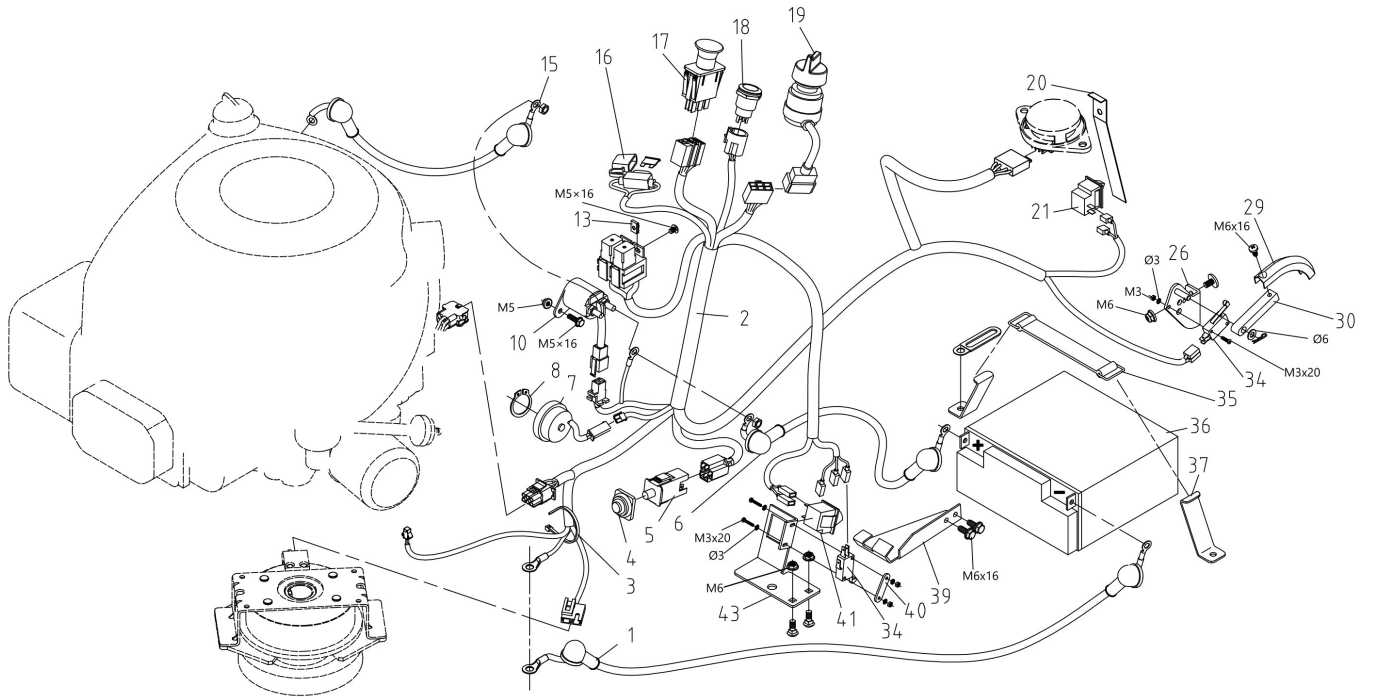 


изображение Electrical parts

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000314R	Battery cables				
2	1	TS000335R	Wiring				
3	20	TS000316R	Band				
3	5	TS000317R	Band				
4	1	TS000318R	Switch protection				
5	1	TS000032R	Switch				
6	1	TS000319R	Battery cables				
7	1	TS000320R	Indicator				
8	1	TS000321R	Snap ring				
10	1	TS000033R	Solenoid				
13	1	TS000323R	Clamp				
15	1	TS000324R	Wire				
16	1	TS000325R	Fuse				
17	1	TS000034R	Switch				
18	1	TS000326R	Switch				
19	1	TS000035R	Shoe				
20	1	TS000327R	Bracket				
21	2	TS000036R	Micro-switch				
26	1	TS000328R	Fixing plate				
29	1	TS000329R	Lever				
30	1	TS000330R	Lever				
34	2	TS000331R	Switch				
35	1	TS000332R	Belt				
36	1	TS000038R	Battery				
37	2	TS000333R	Bracket				
39	1	TS000336R	Control lever				
40	1	TS000337R	Bracket				
41	2	TS000037R	Micro-switch				
43	1	TS000338R	Support				

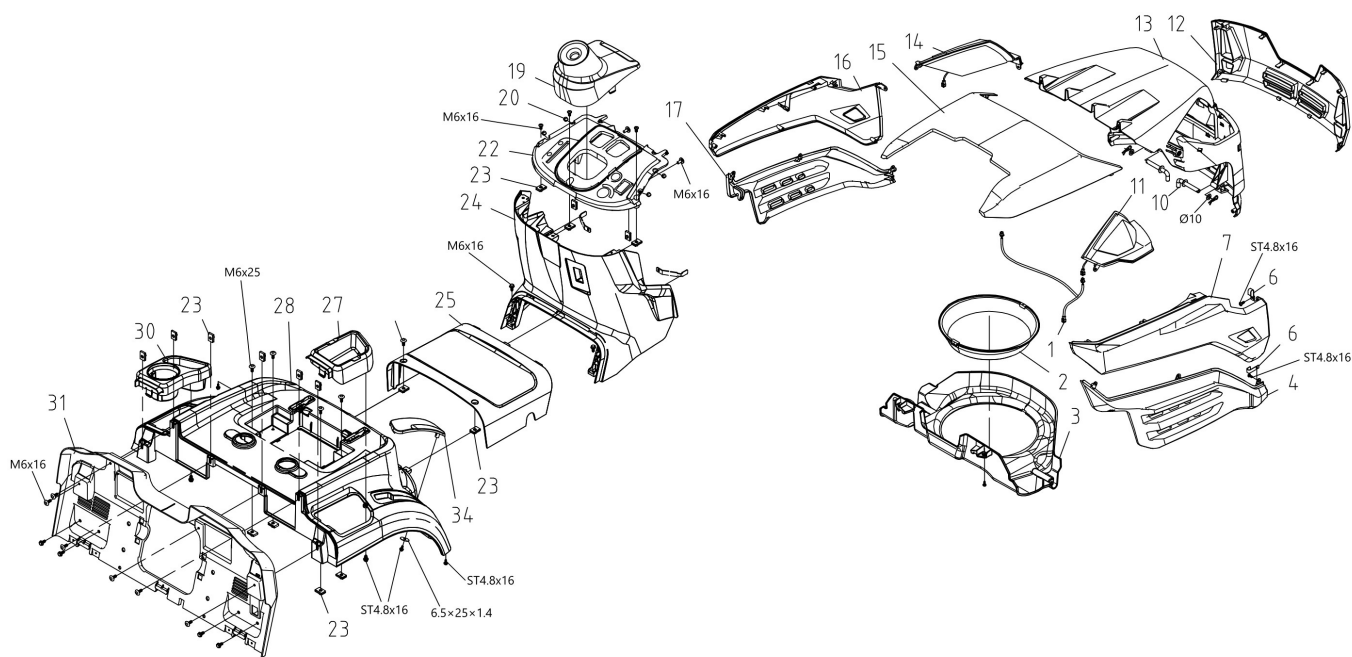 


изображение body

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000340R	Wiring				
2	1	TS000341R	Adapter				
3	1	TS000342R	Deflector				
4	1	TS000343R	Right guard				
6	5	TS000344R	Fairled				
7	1	TS000360R	Right guard			Rosso - Red	
10	2	TS000345R	Pin				
11	1	TS000346R	Headlamp				
12	1	TS000363R	Guard			Rosso - Red	
13	1	TS000039R	Upper hood				
14	1	TS000347R	Headlamp				
15	1	TS000366R	Engine cover			Rosso - Red	
16	1	TS000369R	Left guard			Rosso - Red	
17	1	TS000348R	Left guard				
19	1	TS000349R	Cover				
20	4	TS000350R	Shock absorber				
22	1	TS000351R	Dashboard				
23	15	TS000066R	Clamp				
24	1	TS000352R	Panel				
25	1	TS000040R	Cover				
27	1	TS000353R	Housing				
28	1	TS000041R	Wheels cover				
30	1	TS000354R	Housing				
31	1	TS000355R	Panel				
34	1	TS000357R	Lock				

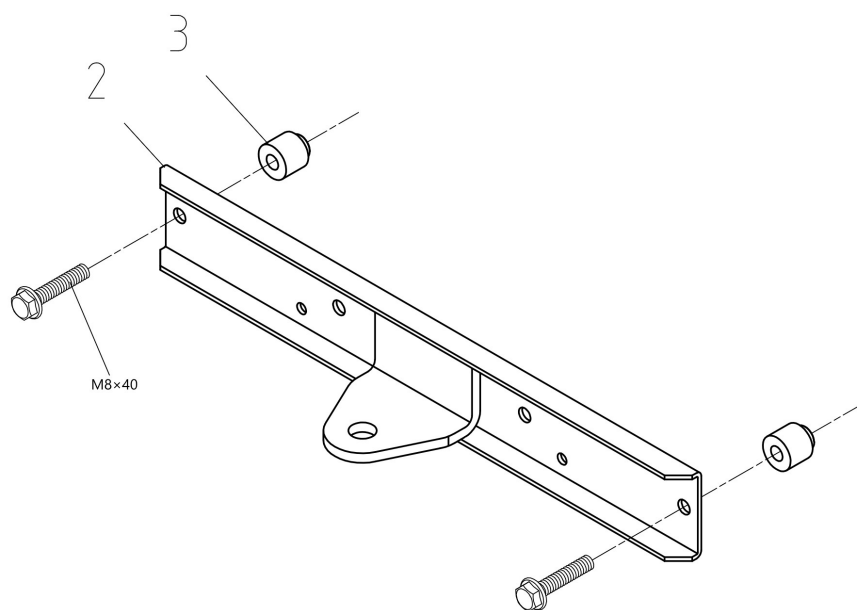 

изображение Towing hitch


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
2	1	TS000358R	Towing hitch				
3	2	TS000359R	Spacer				

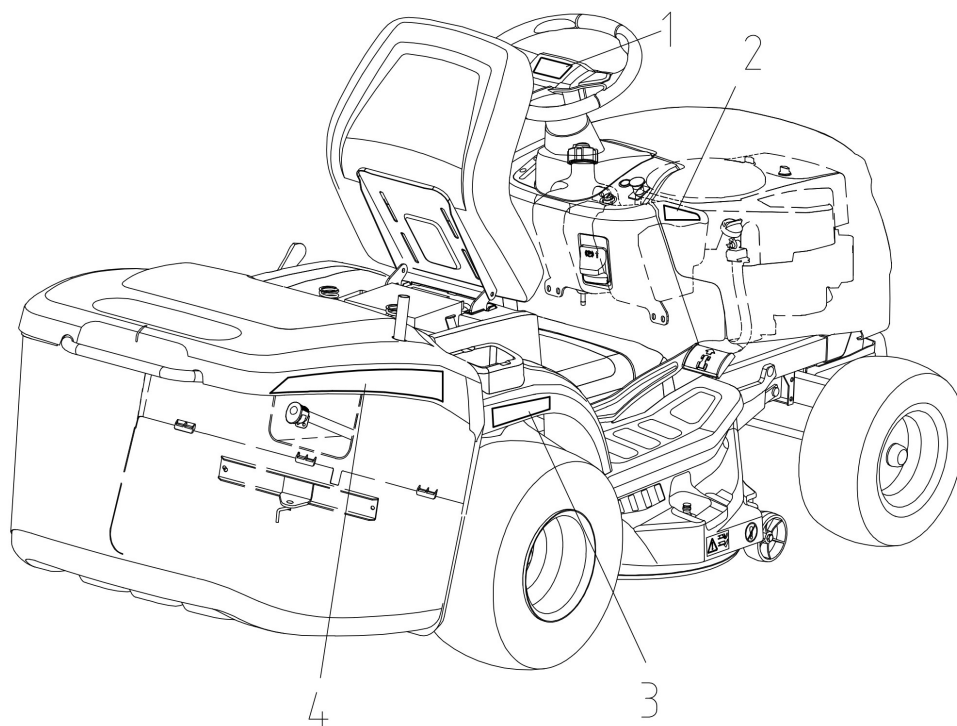 

изображение Labels


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	TS000405R	Label				
2	1	TS000396R	Label				
3	1	TS000384R	Label			102R/16K	
4	1	TS000399R	Label			Destro - Right	
4	1	TS000400R	Label			Sinistro - Left	

 10●
9*

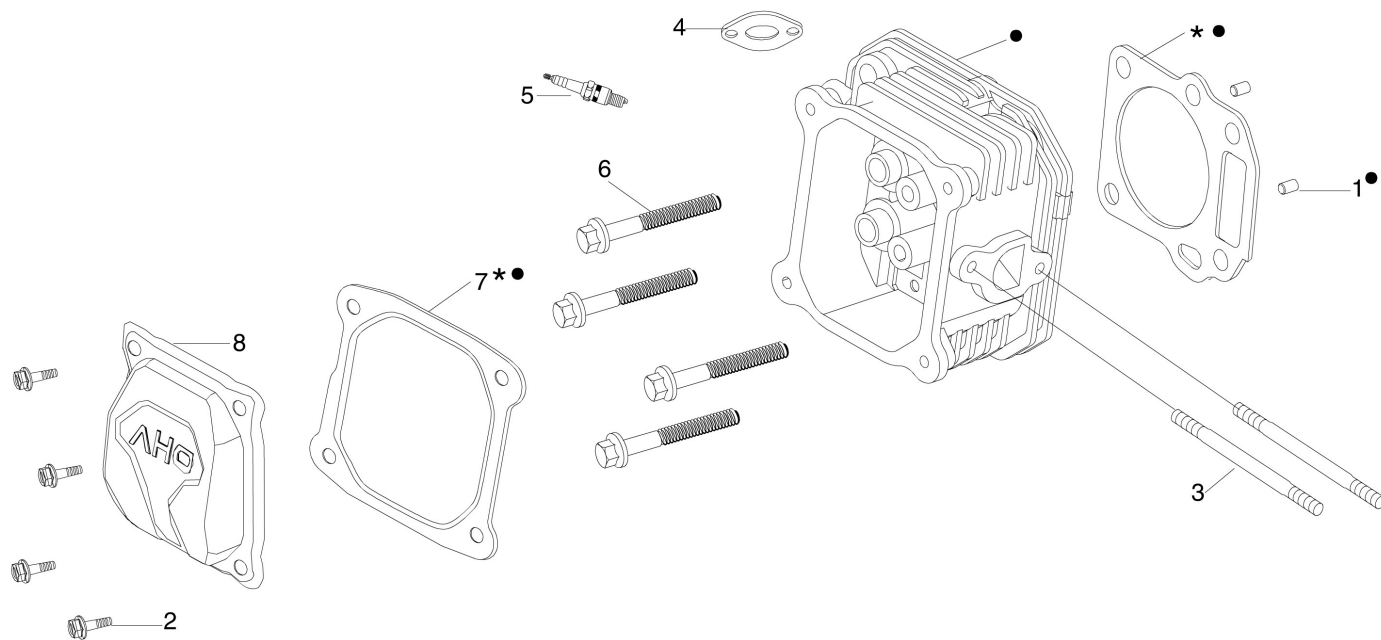


изображение Top cover

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	L66150654	Pin				
2	4	L66150393	Screw				
3	2	L66150822	Stud				
4	1	L66150800	Gasket				
5	1	3055122R	Spark plug				
6	4	L66150818	Bolt				
7	1	L66151496	Gasket				
8	1	L66151497	Cover				
9	1	L66151500	Gasket set				
10	1	L66151501	Compl. top cover				

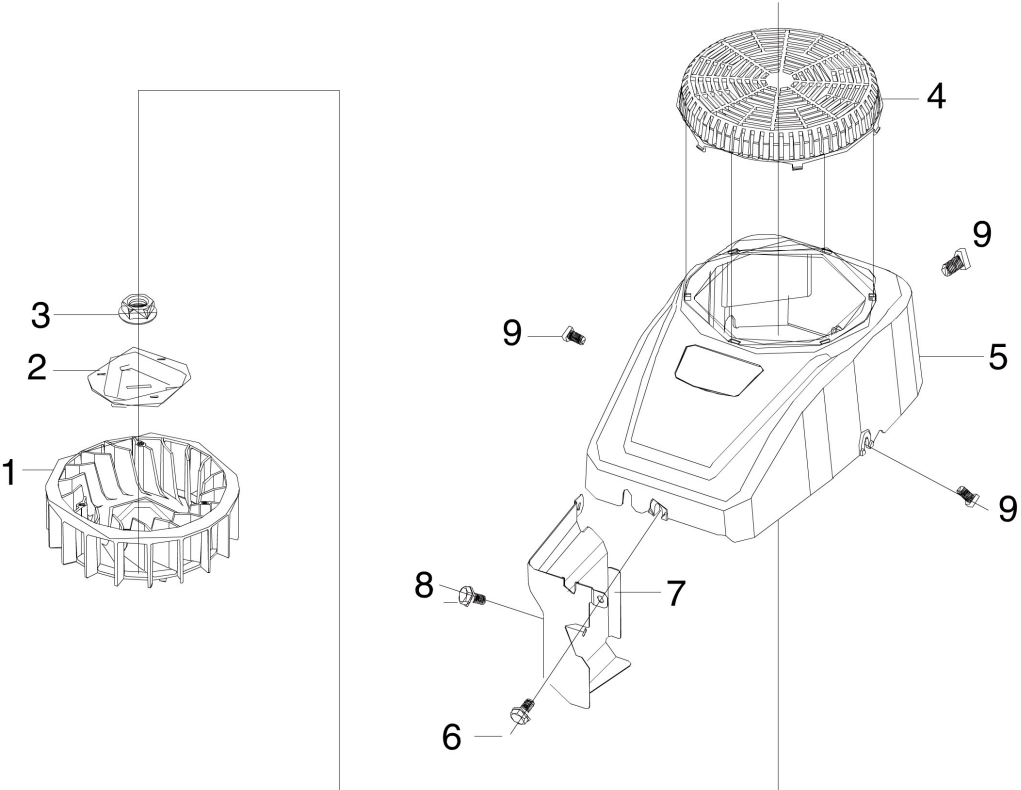 


изображение Ignition system

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150771	Fan				
2	1	L66150802	Pulley				
3	1	L66150823	Nut				
4	1	L66150803	Cover				
5	1	L66150775	Cover				
6	1	L66150815	Bolt				
7	1	L66150774	Guard				
8	1	L66150464	Screw				
9	3	L66150393	Screw				

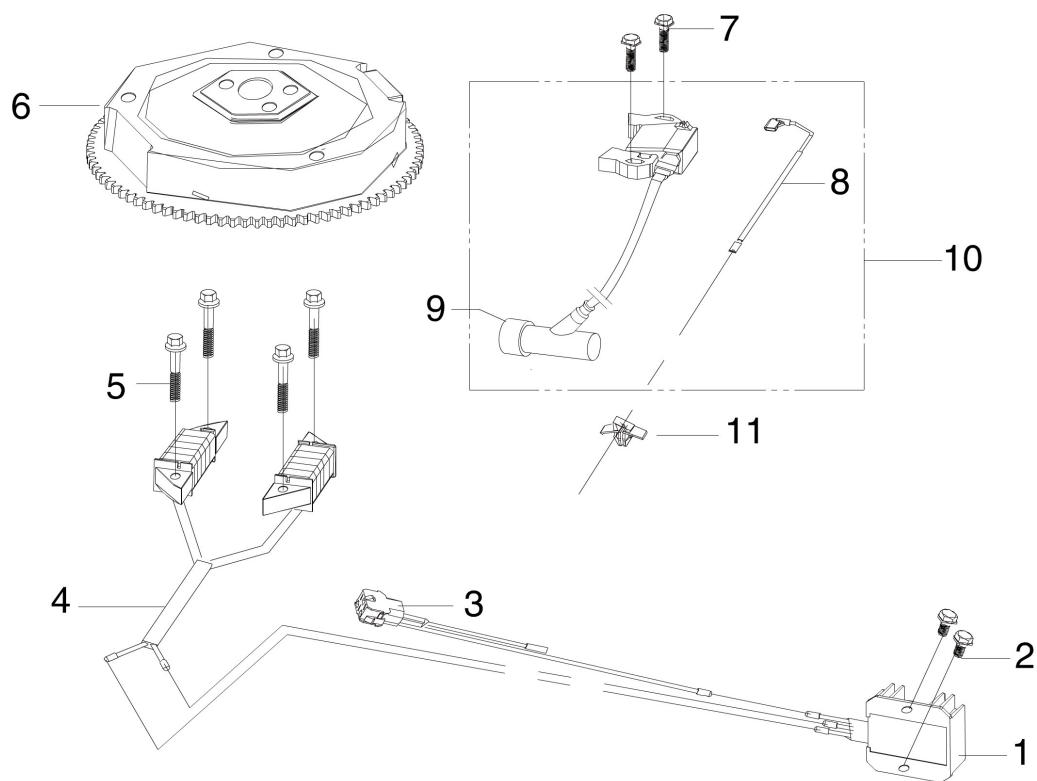 


изображение Flywheel

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66151485	Rectifier				
2	2	L66150464	Screw				
3	1	L66151486	Grip-end				
4	1	L66151487	Plate				
5	4	L66150816	Bolt				
6	1	L66150804	Flywheel				
7	2	L66150817	Bolt				
8	1	L66151495	Engine stop wire				
9	1	L66150810	Spark plug cap				
10	1	L66151488	Ignition coil				
11	1	L66151489	Clip				

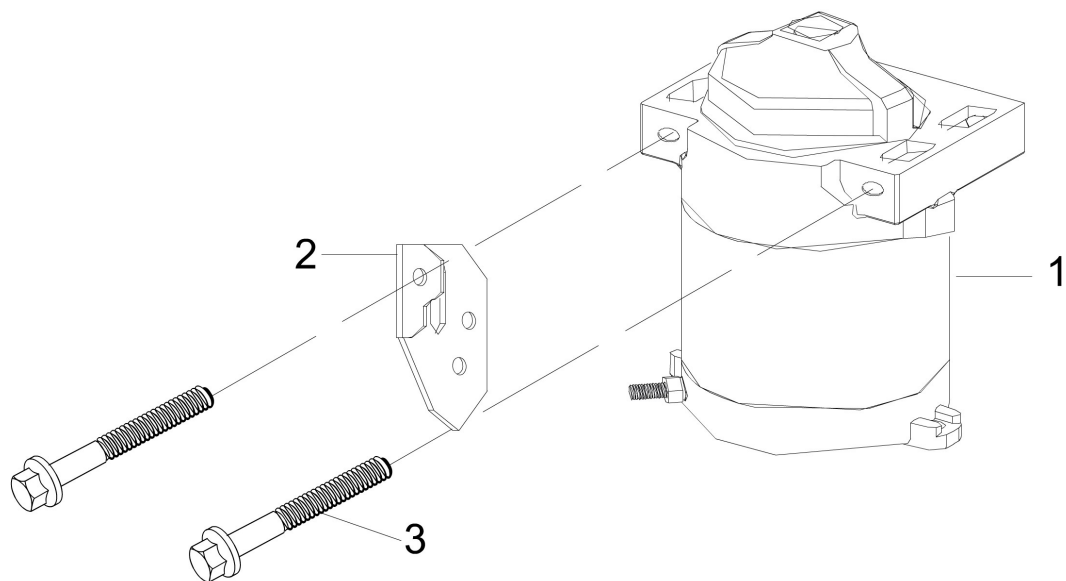 


изображение Starter lever

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66151490	Starter lever				
2	1	L66150808	Bracket				
3	2	L66150821	Bolt				

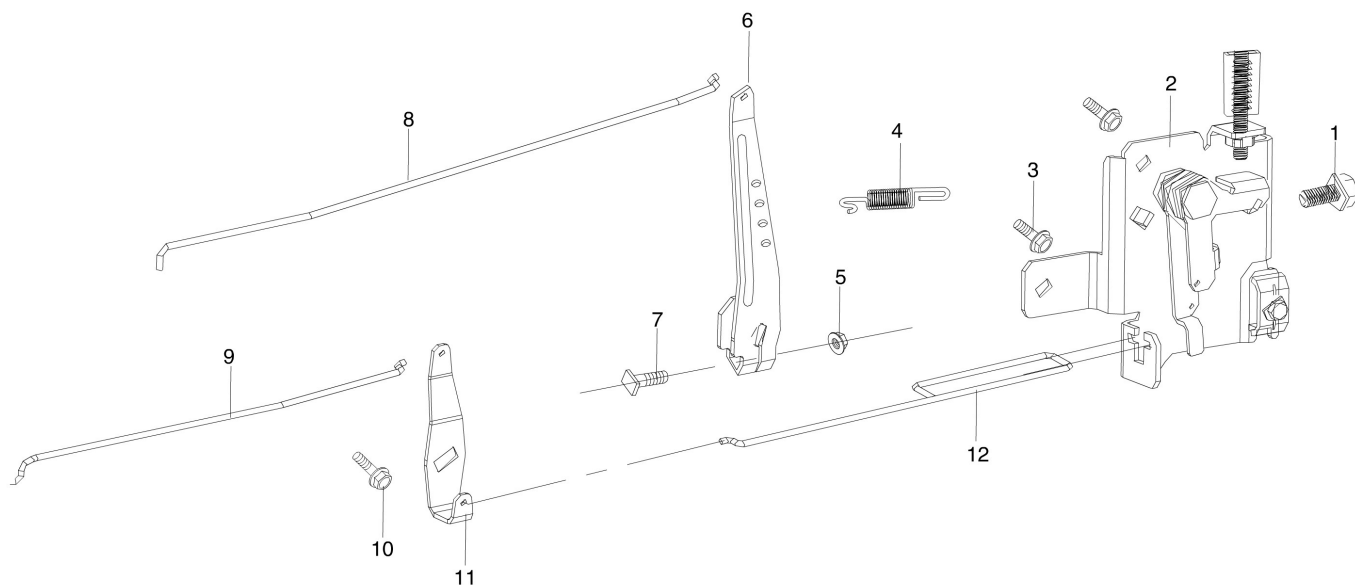 


изображение Control lever

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150251	Screw				
2	1	L66151491	Control				
3	2	L66150393	Screw				
4	1	L66150792	Spring				
5	1	004400959R	Nut				
6	1	L66150793	Governor arm shaft				
7	1	L66150382	Screw				
8	1	L66150791	Governor rod				
9	1	L66150790	Starter cable				
10	1	L66150813	Bolt				
11	1	L66150789	Plate				
12	1	L66150795	Throttle rod				

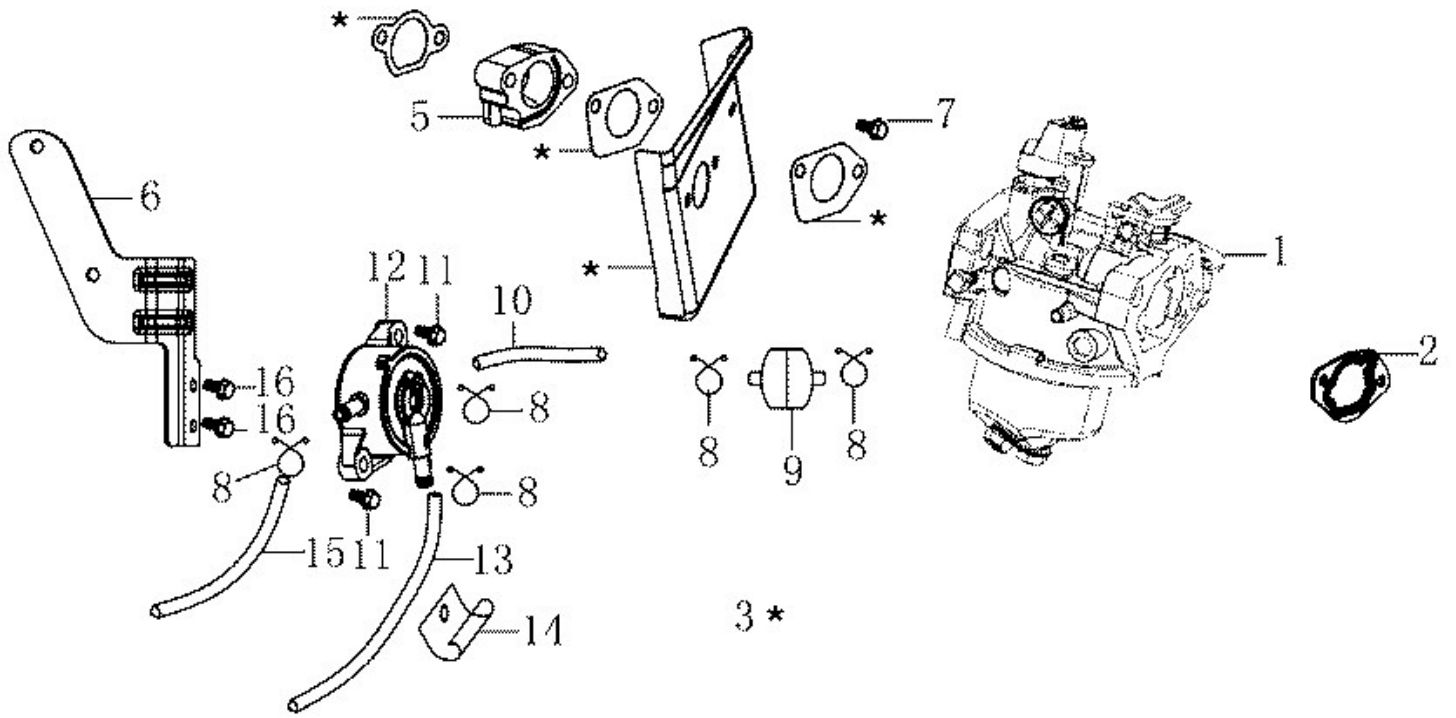 

изображение Carburetor


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150777	Carburetor kit				
2	1	L66150956	Gasket				
3	1	L66151500	Gasket set				
5	1	L66150788	Insulator				
6	1	L66150962	Bracket				
7	1	L66150464	Screw				
8	5	L66150749	Tube				
9	1	L66151503	Fuel hose				
10	1	L66150957	Oil line				
11	2	L66150251	Screw				
12	1	L66150958	Pump				
13	1	L66151498	Tube				
14	1	L66150960	Tube				
15	1	L66150961	Oil line				
16	2	L66150456	Screw				

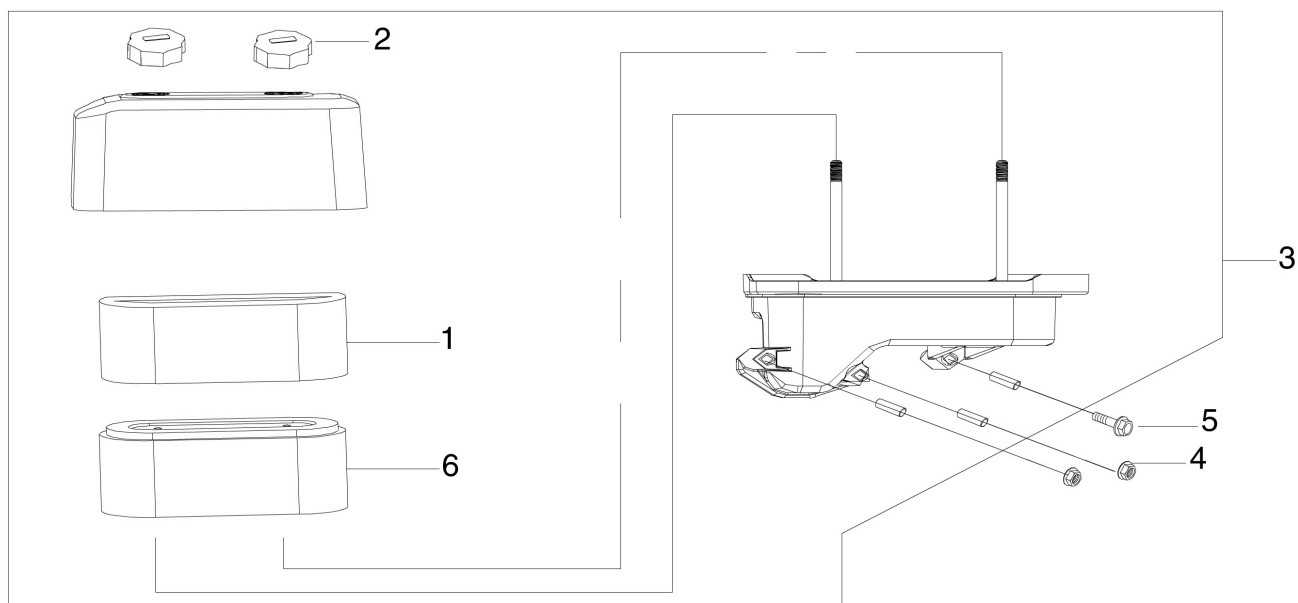 

изображение Air filter


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150799	Filter				
2	2	L66150801	Bolt				
3	1	L66150798	Filter kit				
4	2	004400959R	Nut				
5	1	L66150453	Screw				
6	1	L66150786	Filter				

 12●

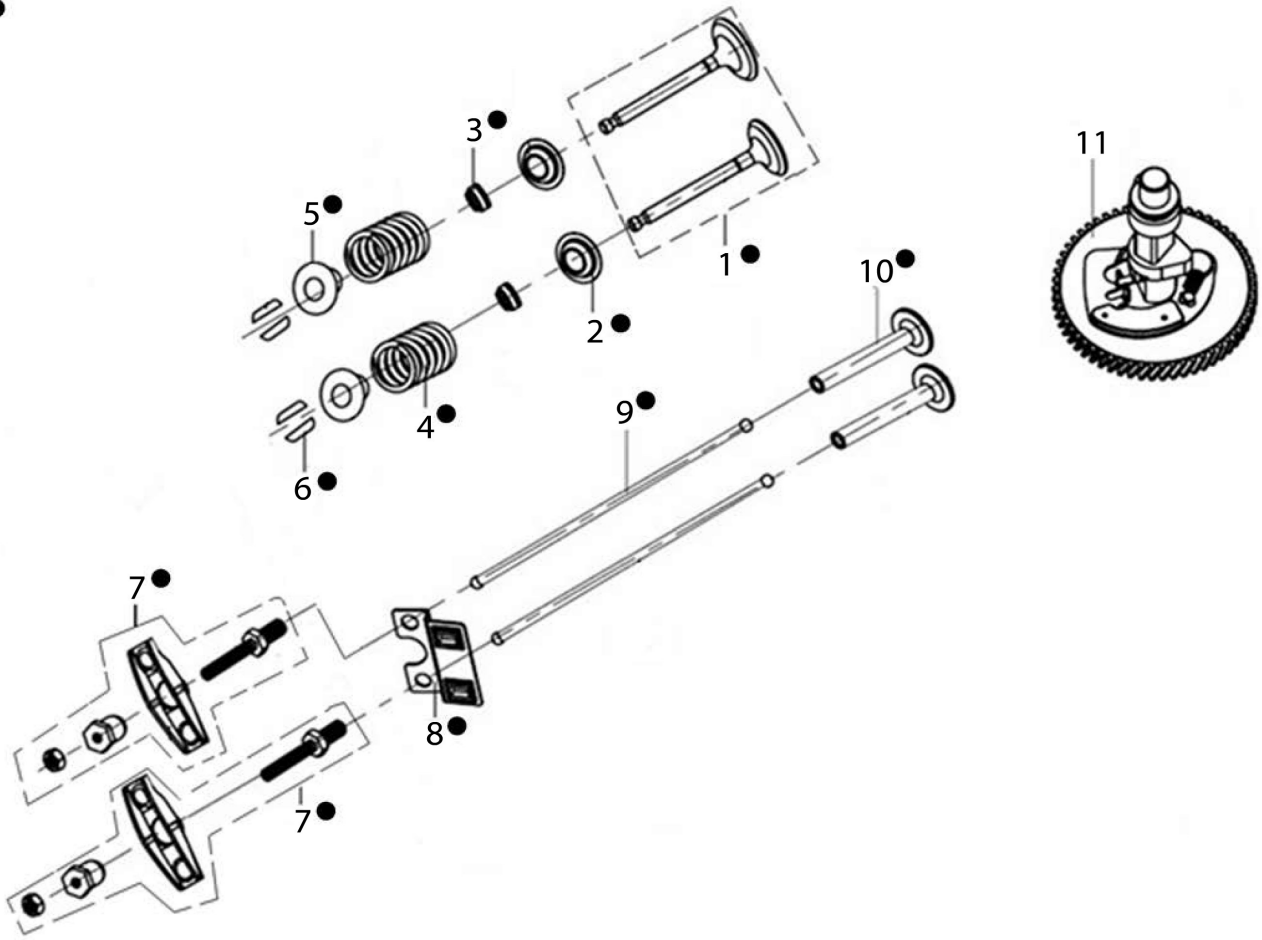

изображение Valves


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150782	Suction/exhaust valve kit				
2	2	L66150560	Slide				
3	2	L66150561	Seal ring				
4	2	L66150559	Spring				
5	2	L66150558	Clamp				
6	4	L66150557	Valve				
7	2	L66150763	Compensator				
8	1	L66150766	Plate				
9	2	L66150764	Equalizer rod				
10	2	L66150554	Slide				
11	1	L66150762	Camshaft assy				
12	1	L66151501	Compl. top cover				

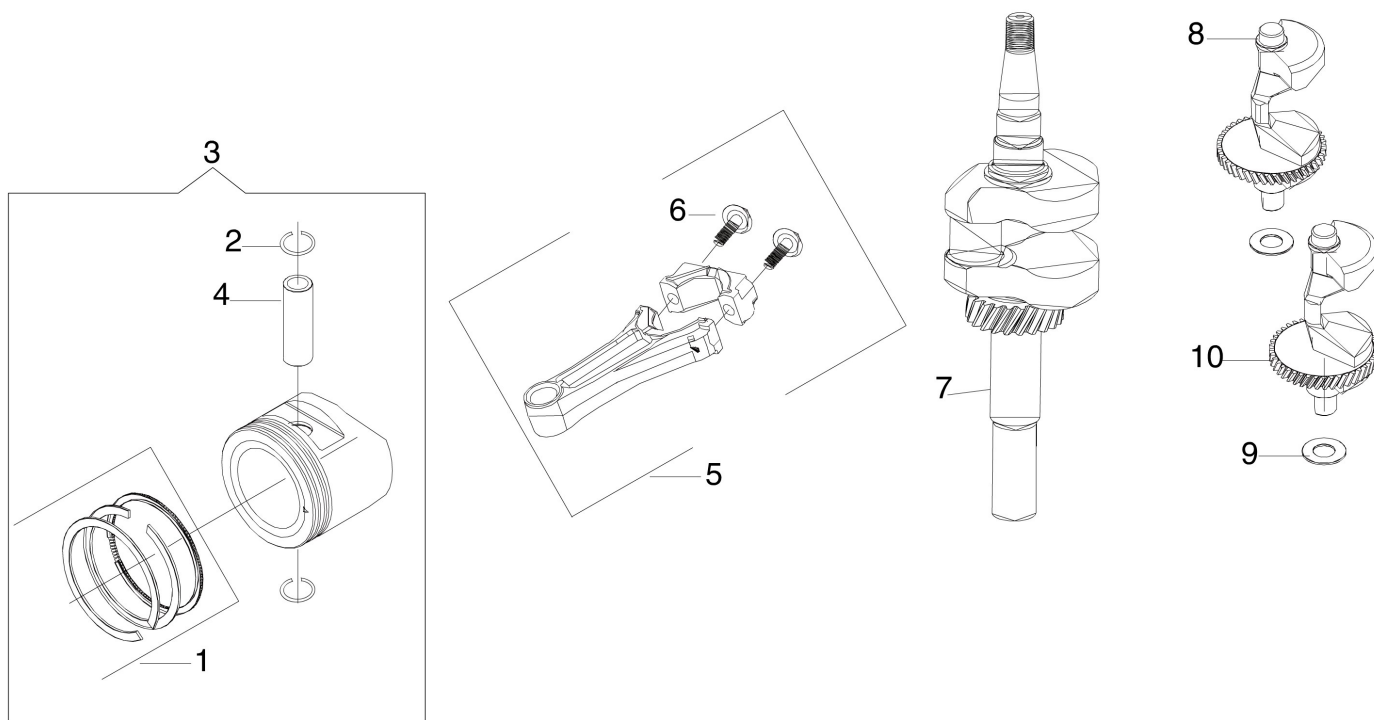 

изображение Crankshaft and piston


Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66150755	Piston ring set				
2	2	L66150669	Ring				
3	1	L66151502	Piston assy				
4	1	L66150693	Piston pin				
5	1	L66150758	Connecting rod cpl.				
6	2	L66150759	Bolt				
7	1	L66150760	Crankshaft				
8	1	L66150963	Compensator				
9	2	L66150825	Washer				
10	1	L66150964	Compensator				

 19 *

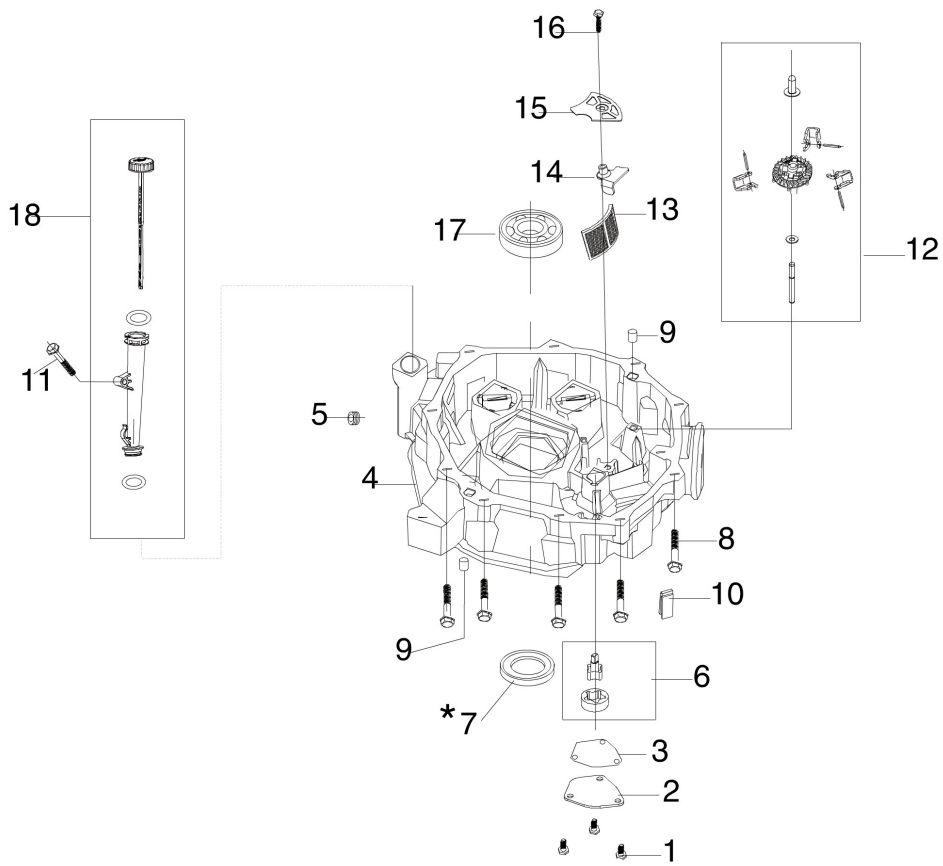

изображение Crankcase cover

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	3	L66150251	Screw				
2	1	L66150768	Oil pump cover				
3	1	L66150756	Seal ring				
4	1	L66151499	Cover				
5	1	L66150743	Close nipple				
6	1	L66150767	Oil pump				
7	1	L66150830	Oil seal				
8	10	L66150820	Bolt				
9	2	L66150828	Pin				
10	1	L66150772	Deflector				
11	1	L66150453	Screw				
12	1	L66150662	Governor				
13	1	L66150769	Oil filter				
14	1	L66150752	Plate				
15	1	L66150770	Filter cover				
16	1	L66150817	Bolt				
17	1	L66150665	Bearing				
18	1	L66150965	Complete cap				
19	1	L66151500	Gasket set				

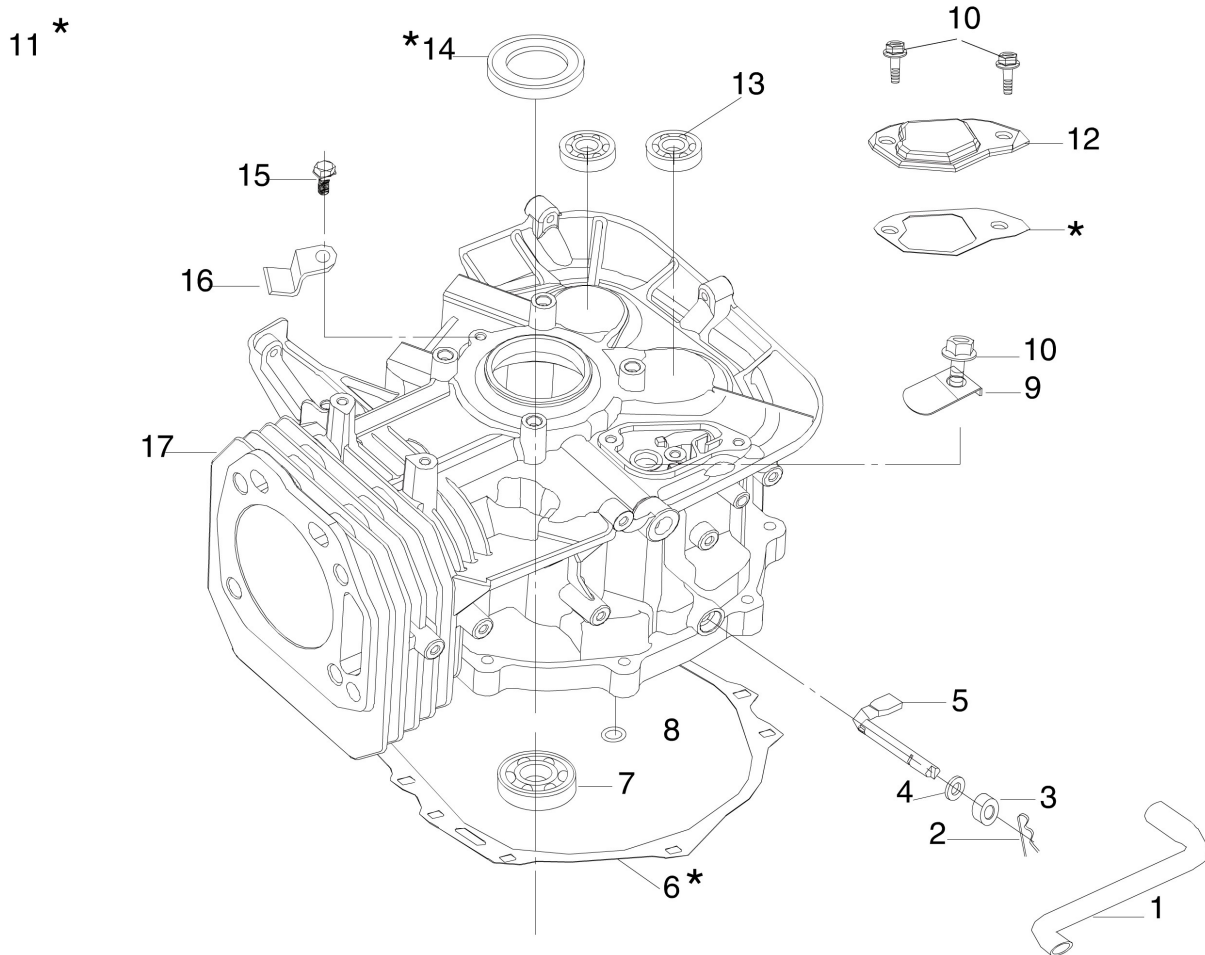 

изображение Cylinder and crankcase

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	L66151494	Breather fuel pipe				
2	1	L66150353	Goupille				
3	1	L66150660	Oil seal				
4	1	L66150824	Washer				
5	1	L66150794	Governor arm shaft				
6	1	L66150744	Gasket				
7	1	L66150665	Bearing				
8	1	L66150741	O-ring				
9	1	L66150410	Reed valve				
10	3	L66150464	Screw				
11	1	L66151500	Gasket set				
12	1	L66150745	Cover				
13	2	L66150829	Bearing				
14	1	L66150830	Oil seal				
15	1	L66150393	Screw				
16	1	L66150739	Valve				
17	1	L66150742	Crankcase				